
#### **OPERATING MANUAL**

ba75651e07 04/2016

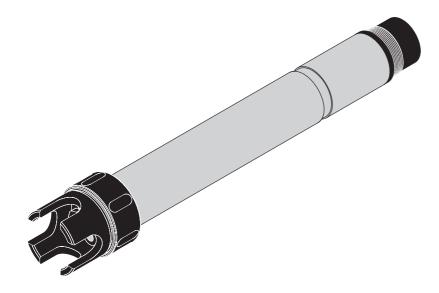

## AmmoLyt<sup>®Plus</sup> 700 IQ

MODULAR SENSOR FOR AMMONIUM



a **xylem** brand

**Copyright** © 2016 Xylem Analytics Germany GmbH Printed in Germany.

## Contents

1	Ove	r <b>view</b> .		. 5
	1.1	How to	use this component operating manual	. 5
	1.2		re of the sensor AmmoLyt <sup>®Plus</sup> 700 IQ	
	1.3		mended fields of application	
2	Safe			٩
2	2.1	•	information	
	2.1	2.1.1	Safety information in the operating manual	
		2.1.2	Safety signs on the product	
		2.1.3	Further documents providing safety information	
	2.2	Safe or		10
		2.2.1	Authorized use	10
		2.2.2	Requirements for safe operation	10
		2.2.3	Unauthorized use	10
3	Com	missio	ning	11
	3.1		of delivery	
	3.2	•	SOR NET system requirements	
	3.3		on the handling of the electrodes	
		3.3.1	Effects to be generally avoided	
		3.3.2	Reference electrode	13
		3.3.3	Measurement electrodes and compensation	
			electrodes	14
	3.4	•	the sensor ready for measuring	15
		3.4.1	Equipping the sensor with electrodes	
		3.4.2	Mounting the protective hood	
	0 5	3.4.3	Connecting the sensor to the IQ SENSOR NET .	17
	3.5	Setting		19
		3.5.1 3.5.2	General information Setting table <i>AmmoLyt+</i> (ammonium sensor)	19
		3.5.3	Setting table <i>AmmoLyt+K</i> (potassium sensor) .	
4	Matr	ix adiu	stment, check and calibration	24
т	4.1	-	al information	
	4.1		adjustment	
	4.2	4.2.1	General information on matrix adjustment	
		4.2.2	Carrying out the matrix adjustment	
		4.2.3	Result of the matrix adjustment	
		4.2.4	Special functions	
	4.3	Check	and calibration in standard solutions	
	-	4.3.1	General information on checking and calibrating	

		4.3.2 Result of the check	
		4.3.3 Result of the calibration	
	4.4	Sensor history	31
5	Меа	suring	. 34
	5.1	Measurement operation	34
	5.2	Factors affecting the measured value	34
6	Mair	ntenance and electrode exchange	. 35
	6.1	General maintenance instructions	35
	6.2	Exterior cleaning	35
	6.3	Exchanging the electrodes	37
7	Rep	lacement parts and accessories	. 38
	7.1	Electrodes	38
	7.2	General accessories	38
8	Wha	at to do if	. 40
	8.1	Interpretation of the drift voltage	40
	8.2	Error causes and remedies	
9	Tec	hnical data	. 44
	9.1	Measuring characteristics	
	9.2	Application conditions	
	9.3	General data	
	9.4	Electrical data	47
	9.5	Data of the VARiON <sup>®Plus</sup> electrodes	48
		9.5.1 Response times	
		9.5.2 Materials	
		9.5.3 Weights	48
10		exes	
	10.1	Explanation of the messages	
			10
		10.1.1 Error messages	
		10.1.1       Error messages         10.1.2       Informative messages         Status info	49

### 1 Overview

#### 1.1 How to use this component operating manual

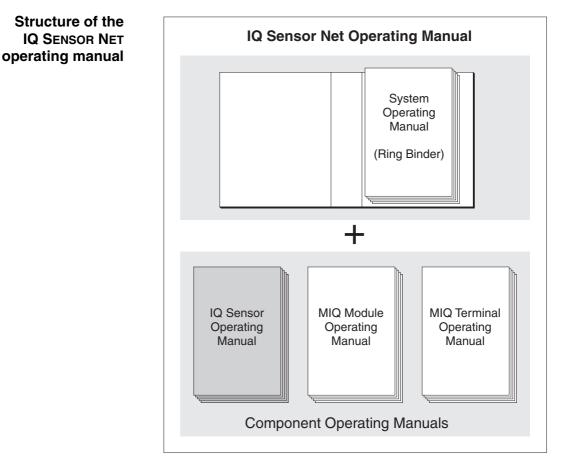


Fig. 1-1 Structure of the IQ SENSOR NET operating manual

The IQ SENSOR NET operating manual has a modular structure like the IQ SENSOR NET itself. It consists of a system operating manual and the operating manuals of all the components used.

Please file this component operating manual in the ring binder of the system operating manual.

Ž		4		5
Fig. 1-2	Structure of the sensor	AmmoLyt <sup>®Plus</sup> 700 IQ		
1	Protective hood			
2	Temperature sensor	r		
3	Electrode support w	ith electrodes (sam	le equinmer	nt)

#### 1.2 Structure of the sensor AmmoLyt<sup>®Plus</sup> 700 IQ

1	Protective hood
2	Temperature sensor
3	Electrode support with electrodes (sample equipment)
4	Sensor shaft
5	Plug head connector

**Electrodes** For a AmmoLyt<sup>®Plus</sup> 700 IQ sensor ready to measure, a jointly used reference electrode and at least one ion sensitive electrode for the main measured parameter (ammonium) is required. The electrodes are screwed into the electrode support. The electrode support has three receptacles for this.

Automatic interfering ions compensation The AmmoLyt<sup>®Plus</sup> 700 IQ enables the automatic interfering ions compensation for the main measured parameter. Thus the influence of interfering ions due to measuring technique can be automatically compensated for.

For ammonium measurement, the main interfering ion in water / wastewater-applications is potassium. To determine the interfering ions concentration, another electrode (compensation electrode) is mounted into a free receptacle.



Information on the fundamentals of measuring with ion sensitive electrodes is given in the primer, ION SELECTIVE MEASUREMENT IN ONLINE ANALYSIS.

#### Operating modes and electrode equipment

Due to its modular structure, the AmmoLyt<sup>®Plus</sup> 700 IQ can be adapted to various requirements (see table on the following page).

Notes on the table:

The reference electrode has an extra receptacle marked by a recess. The ion sensitive electrodes can be mounted in the remaining three receptacles in any order. Empty receptacles have to be closed with the VARION<sup>®</sup> BP blind plug.

Operating mode	Electrode equipment	
Ammonium mea- surement	VARION <sup>®</sup> Ref	
Ammonium mea- surement, compen- sated	VARION <sup>®</sup> Ref (recess)	

**Calibration free** operation The AmmoLyt<sup>®Plus</sup> 700 IQ sensor is immediately ready to measure after being equipped with electrodes. For precise measurements, it is only necessary to adjust the electrodes to the sample matrix ("matrix adjustment"). In the recommended application (see section 1.3 RECOMMENDED FIELDS OF APPLICATION), the measuring characteristics of the electrodes remain stable for their entire service life. Thus, calibration is not recommended.

> Possible changes of the sample matrix can be determined by occasional comparison measurements (e.g. photometer) and compensated for by a new matrix adjustment as necessary. The sensor does not have to be taken out of the sample for this.

**Shielding of the AmmoLyt<sup>®Plus</sup> 700 IQ The AmmoLyt<sup>®Plus</sup> 700 IQ Conjunction with the IQ SENSOR NET system form a measuring system** that is protected to a high degree against low and high frequency interference as well as against the indirect effects of lightning strikes.

#### 1.3 Recommended fields of application

The AmmoLyt<sup>®Plus</sup> 700 IQ sensor is a sensor for the online determination of ammonium ions in water or wastewater applications. It supplements D. O. measurement in the aeration tank of waste water treatment plants and enables an efficient process control of nitrogen removal.



More detailed information on measuring with ion sensitive electrodes is given in the primer, ION SELECTIVE MEASURE-MENT IN ONLINE ANALYSIS.

## 2 Safety

#### 2.1 Safety information

#### 2.1.1 Safety information in the operating manual

This operating manual provides important information on the safe operation of the product. Read this operating manual thoroughly and make yourself familiar with the product before putting it into operation or working with it. The operating manual must be kept in the vicinity of the sensor so you can always find the information you need.

Important safety instructions are highlighted in this operating manual. They are indicated by the warning symbol (triangle) in the left column. The signal word (e.g. "CAUTION") indicates the level of danger:



#### WARNING

indicates a possibly dangerous situation that can lead to serious (irreversible) injury or death if the safety instruction is not followed.



#### CAUTION

indicates a possibly dangerous situation that can lead to slight (reversible) injury if the safety instruction is not followed.

#### NOTE

indicates a situation where goods might be damaged if the actions mentioned are not taken.

#### 2.1.2 Safety signs on the product

Note all labels, information signs and safety symbols on the product. A warning symbol (triangle) without text refers to safety information in this operating manual.

#### 2.1.3 Further documents providing safety information

The following documents provide additional information, which you should observe for your safety when working with the measuring system:

- Operating manuals of other components of the measuring system (power packs, controller, accessories)
- Safety datasheets of calibration and maintenance equipment (e.g. cleaning solutions).

#### 2.2 Safe operation

#### 2.2.1 Authorized use

The authorized use of the AmmoLyt<sup>®Plus</sup> 700 IQ consists of its use as a sensor in the IQ SENSOR NET. Only the operation and running of the sensor according to the instructions and technical specifications given in this operating manual is authorized (see chapter 7 TECHNICAL DATA). Any other use is considered unauthorized.

#### 2.2.2 Requirements for safe operation

Note the following points for safe operation:

- The product may only be operated according to the authorized use specified above.
- The product may only be supplied with power by the energy sources mentioned in this operating manual.
- The product may only be operated under the environmental conditions mentioned in this operating manual.
- The product may not be opened.

#### 2.2.3 Unauthorized use

The product must not be put into operation if:

- it is visibly damaged (e.g. after being transported)
- it was stored under adverse conditions for a lengthy period of time (storing conditions, see chapter 7 TECHNICAL DATA).

## 3 Commissioning

#### 3.1 Scopes of delivery

The AmmoLyt<sup>®Plus</sup> 700 IQ sensor is provided in sets for different measurement requirements. Each set contains the following components:

- Unequipped sensor AmmoLyt<sup>®Plus</sup> 700 IQ. The electrode receptacles are closed with blind plugs
- Reference electrode VARiON<sup>®Plus</sup> Ref
- Depending on the set, the suitable selection from the following measurement and compensation electrodes:
  - VARiON<sup>®Plus</sup> NH4 (ammonium electrode)
  - VARiON<sup>®Plus</sup> K (potassium electrode for compensation)
- Special socket wrench
- VARiON<sup>®</sup> 700 IQ-SK protective hood
- Potassium chloride solution for storing the reference electrode
- Operating manual



Information on the available sets is given in the catalog and on the Internet.

#### 3.2 IQ SENSOR NET system requirements

Operation of the AmmoLyt<sup>®Plus</sup> 700 IQ requires the following software statuses in the IQ SENSOR NET, depending on the system:

<ul><li>MIQ/MC2</li><li>MIQ/TC 2020 XT</li></ul>	Software:	Version 3.35 or higher
	Simplified operation from software:	Version 3.60 or higher
<ul> <li>DIQ/S 182</li> </ul>	Software:	Version 3.21 or higher
<ul> <li>MIQ/C184 (XT)</li> </ul>	Controller software:	Version 2.83 or higher
	Terminal software:	Version 2.91 or higher

Software versions of the controller and terminal components

<ul> <li>MIQ/MC</li> </ul>	Controller software:	Version 2.83 or higher
<ul> <li>MIQ/T 2020 (PLUS)</li> </ul>	Terminal software:	Version 2.91 or higher
<ul> <li>IQ-LabLink procedure</li> </ul>	Software: (AmmoLyt <sup>®Plus</sup> 700 IQ )	Version 3.06 to version 3.25

#### 3.3 Notes on the handling of the electrodes

The electrodes of the AmmoLyt<sup>®Plus</sup> 700 IQ sensor were developed for the rough use in waste water treatment plants. They are, however, precision parts that can be damaged by inappropriate use.

#### 3.3.1 Effects to be generally avoided

Avoid the following effects that can adversely affect the measurement characteristics of the electrodes or reduce their lifetime:

- Drying-up of the electrode membrane and junction
- Scratching of the electrode membrane and junction
- Contact with fat, oil, alcohol, acids, lyes, tensides and similar substances
- Cleaning with washing-up liquid (tenside!)
- Cleaning with or storing in deionized water
- Storing in wrong storing solution

Therefore, exactly follow the instructions in the two following chapters.

#### 3.3.2 Reference electrode

#### Commissioning

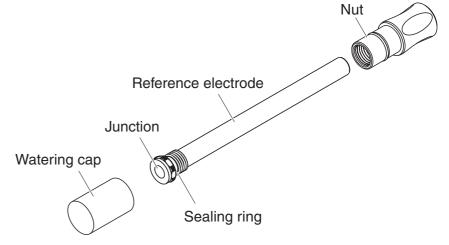


Fig. 3-1 Reference electrode with storing aids


In the delivery condition, the electrode is equipped with a watering cap and a nut that protects the screw-in thread. The watering cap contains 3 mol/l potassium chloride solution. Before mounting, unscrew the watering cap. Then, using the special hexagon key, unscrew the electrode from the nut. Keep both storing aids in case you want to store the electrode.

The junction of the reference electrode must not

- dry up (follow notes on storage)
- be damaged
- be brought into contact with grease.

**Notes on storage** If you will not use the electrode for a longer period of time, screw the electrode into the nut as far as it will go. Fill the watering cap to the brim with 3 mol/l potassium chloride solution and tightly screw the watering cap on the electrode by hand.

Commissioning

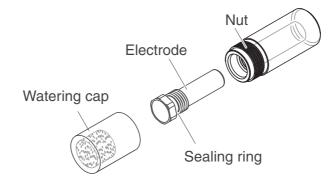

#### 3.3.3 Measurement electrodes and compensation electrodes

Fig. 3-2 Measurement or compensation electrode with storing aids

In the delivery condition, each electrode is equipped with a watering cap and a nut that protects the screw-in thread. Prior to installation, first remove the watering cap and, using the special hexagon key, unscrew the electrode from the nut. Keep both storing aids in case you want to store the electrode.

The membrane of the electrode must not



- dry up (follow notes on storage)
- be damaged
- be brought into contact with grease.

#### Notes on storage

If you will not use the electrode for a longer period of time, screw the electrode into the nut as far as it will go. Soak the foam insert in the watering cap with VARiON<sup>®</sup>/ES-1 standard solution (lower concentration) and plug the electrode into the watering cap.

#### NOTE

Make sure to use the correct solution for the watering cap (VARiON<sup>®</sup>/ ES -1 standard solution). If you use the watering solution of the reference electrode instead the function of the electrode can be seriously damaged.

#### 3.4 Getting the sensor ready for measuring

#### 3.4.1 Equipping the sensor with electrodes

#### NOTE

The sensor can be damaged by dirt and moisture. Before mounting the electrodes make sure the area behind the sealing ring of the electrodes and the receptacle are dry and clean. The AmmoLyt<sup>®Plus</sup> 700 IQ may only be submersed when the electrodes or original blind plugs are mounted.



More detailed information on the electrode equipment for the various operating modes is given in chapter 1.2.

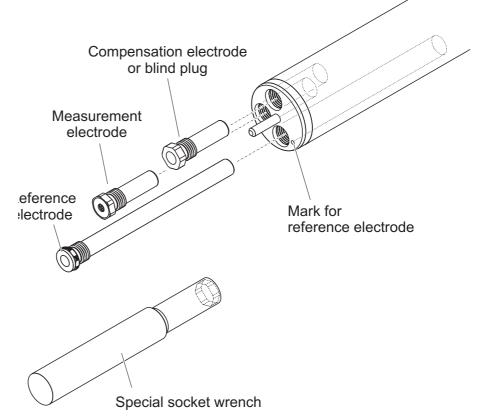


Fig. 3-3 Equipping the sensor with electrodes.

All receptacles are closed with blind plugs in the delivery condition. Screw the electrodes into the receptacles instead of the blind plugs.

When doing so observe the following points:

• The receptacle for the reference electrode is marked by a recess. It extends into the inside of the sensor clearly deeper than the other three receptacles (see Fig. 3-3).

- The measurement and compensation electrodes can be mounted in the remaining three receptacles in any order.
- During installation make sure the area behind the sealing ring of the electrode and the receptacle are absolutely dry and clean.
- Plug the electrode on the special socket wrench provided and insert the electrode with the special socket wrench.
- Screw until the electrode is seated on the electrode support without any gap. Thus the tightness and electrical contacting are granted.



When mounted, the electrodes can be recognized by the features described in section 6.3.

#### 3.4.2 Mounting the protective hood

# CH cleaning head<br/>(option)For permanent operation, we recommend to use the CH cleaning head<br/>for compressed air-driven cleaning. It is mounted instead of the stan-<br/>dard protective hood. The compressed air cleaning is started time-con-<br/>trolled via the IQ SENSOR NET system. Information on the required<br/>components is given in the catalog and on the Internet.

If no CH cleaning head is used the standard protective hood should always be mounted for measuring. It protects the electrodes from rough mechanical impact.

#### Mounting the standard protective hood

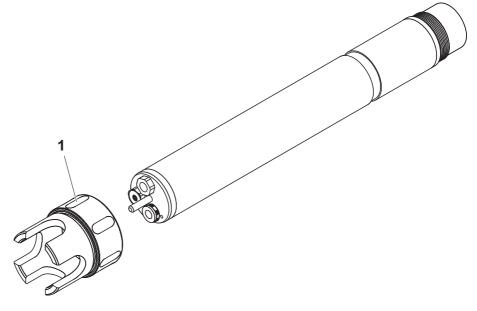


Fig. 3-4 Mounting the standard protective hood.

1 Loosen the coupling ring (1) of the protective hood.		Loosen the coupling ring (1) of the protective hood.
2 Push the protective hood on the sensor as far as it will g		Push the protective hood on the sensor as far as it will go.
	3	Tighten the coupling ring of the protective hood.

Cleaning the protective<br/>hoodThe coupling ring of the protective hood can be taken apart for cleaning<br/>purposes (see section 6.2 EXTERIOR CLEANING).

#### 3.4.3 Connecting the sensor to the IQ SENSOR NET

The SACIQ sensor connection cable is required to connect the sensor. Information on this and other IQ SENSOR NET accessories is given in the catalog and on the Internet.



Do not suspend the sensor on the sensor connection cable. Use an armature or electrode holder. Information on this and other IQ SENSOR NET accessories is given in the catalog and on the Internet.



How to connect the SACIQ sensor connection cable to the IQ SENSOR NET is described in chapter 3 INSTALLATION of the IQ SENSOR NET system operating manual.

Are the plug connections dry?

**Connection cable** 

Before connecting the sensor and sensor connection cable, make sure that the plug connections are dry. If moisture gets into the plug connections, first dry the plug connections (dab them dry or blow them dry using compressed air). Connecting the sensor to the sensor connection cable

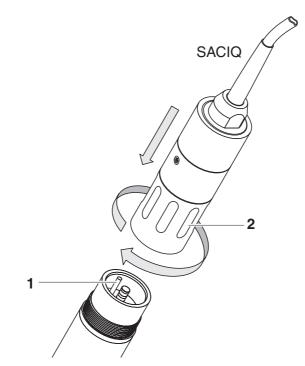


Fig. 3-5 Connect the sensor

1	Take the protective caps off the plug connections of the sensor and the SACIQ sensor connection cable, and keep them safe.
2	Plug the socket of the SACIQ sensor connection cable onto the plug head connector of the sensor. At the same time, rotate the socket so that the pin in the plug head connector (1) clicks into one of the two holes in the socket.
3	Then screw the coupling ring (2) of the sensor connection cable onto the sensor up to the stop.

#### 3.5 Settings

#### 3.5.1 General information

Automatic electrode recognition The AmmoLyt<sup>®Plus</sup> 700 IQ software automatically recognizes the builtin electrodes and checks the equipment for validity. Depending on the equipment, the following sensors can be displayed in the list of sensors:

	sensor	Designation	
	AmmoLyt <sup>®Plus</sup> 700 IQ Ammonium sensor	AmmoLyt+	
	AmmoLyt <sup>®Plus</sup> 700 IQ potassium sensor *	AmmoLyt+K	
	* see setting table of the sensor		
Carrying out settings	Using <b><s></s></b> , switch from the measured value dis of the settings. Then navigate to the setting me sensor. The exact procedure is given in the rel- system operating manual.	menu (setting table) of the	
	The setting tables of the sensors are described ters.	t in the following chap-	
Sensor overlapping settings	Certain settings are sensor overlapping and car the setting tables. The setting is used by all se	-	
	The sensor overlapping settings are:		
	<ul> <li>Temperature mode (°C/°F)</li> </ul>		

• Temp. adjustment

Menu item	Selection/Values	Explanations
Measuring mode	<ul> <li>NH4-N</li> <li>NH4</li> <li>mV</li> </ul>	Citation form of the mass concentration or voltage of the electrode.
Measuring range (Measuring mode: NH4-N)	<ul> <li>AutoRange</li> <li>0.1 100.0 mg/l</li> <li>1 2000 mg/l</li> </ul>	2 measuring ranges can be selected. With <i>AutoRange</i> , the instrument automatically switches to the suitable measuring range.
<i>Measuring range (Measuring mode: NH4</i> )	<ul> <li>AutoRange</li> <li>0.1 129.0 mg/l</li> <li>1 2580 mg/l</li> </ul>	2 measuring ranges can be selected. With <i>AutoRange</i> , the instrument automatically switches to the suitable measuring range.
Measuring range (Measuring mode: mV)	● -2000 2000 mV	Fixed range
If the sensor is not equip	ped with a potassium elec	ctrode:
Potassium compens.	Manual	After determining the potassium content of the test solution, enter the potassium content determined in the next line manually ( <i>Potassium conc.</i> ). The measured value is accordingly corrected by the entered potassium content.
		Note: With the <i>Link (sensor to sensor)</i> function, the IQ SENSOR NET is able to provide a measured value for the interfering ion.
		Note: Detailed information on the subject of potassium compensation is given in the primer, ION SELECTIVE MEASUREMENT IN ONLINE ANALYSIS.
Potassium conc.	0.1 1000 mg/l	Manual input of the potassium value

### 3.5.2 Setting table AmmoLyt+ (ammonium sensor)

Menu item	Selection/Values	Explanations
If the sensor is equipped	with a potassium electrod	e:
VARION K	<ul><li>hide</li><li>show</li></ul>	<i>hide</i> (standard setting): The potassium electrode is not displayed as an extra sensor in the measured value display. More settings are possible (see below).
		<i>show</i> : If the sensor is equipped with the potas- sium electrode, the electrode is displayed as the extra sensor <i>VARiON K</i> in the mea sured value display. The relevant settings can be done in an extra setting table (see section 3.5.3). <u>Note:</u> If the maximum number of sensors for the system is exceeded by activating the sensor, the <i>VARiON K</i> cannot be activated.
If the setting VARiON P	<i>hide</i> was additionally sele	cted:
Calib. history K	<ul> <li>Do not download</li> <li>Transmit to log book</li> </ul>	The selection of <i>Transmit to log book</i> generates a log book message with the calibration history of the potassium electrode. When opening the setting table again the setting is reset to <i>Do not download</i> .
Potassium compens.	Automatic	When the potassium electrode is mounted, the potassium compensation takes places automatically only. The value of the potassium concentration measured at the time the setting table was opened is displayed in the next line ( <i>Potassium</i> <i>conc.</i> ).
Potassium conc.		Display of the measured potassium value (0.1 1000 mg/l).
<i>Temperature mode</i> (only with <i>Measuring mode</i> : <i>NH4-N</i> or <i>NH4</i> )	• °C • °F	Unit of the measured temperature value (Celsius, Fahrenheit).

Menu item	Selection/Values	Explanations
Temp. adjustment (only with <i>Measuring</i> <i>mode</i> : <i>NH4-N</i> or <i>NH4</i> )	-1.5 °C +1.5 °C	<ul> <li>The temperature compensation function enables the temperature sensor to be balanced against a reference temperature measurement (displacement of the zero point by ±1.5 °C).</li> <li>Notes:</li> <li>Due to the thermal capacity of the sensor, it is necessary to place it in a container with at least 2 liters of water.</li> </ul>
		<ul> <li>Leave the sensor in this container for at least 15 minutes while stirring occa- sionally, then carry out the adjustment. If the temperature difference of the water and sensor is &gt; 10°C, leave the sensor in the container for at least one hour while stirring occasionally.</li> </ul>
Conc. offset	-1.0 mg/l +1.0 mg/l	Constant value that is added to the mea- sured value.
Save and quit		The system confirms the saving of the set- tings and the display switches to the next higher level.
Quit		The display switches to the next higher level without storing the new settings.

#### 3.5.3 Setting table AmmoLyt+K (potassium sensor)



These sensor settings are only available if in the sensor settings for the *AmmoLyt+* the setting *VARiON K* was set to *Active* (see section 3.5.2).

The basic settings are taken over from the *AmmoLyt+* sensor but can be adjusted separately afterwards.

Menu item	Selection/Values	Explanations
Measuring mode	● K (mg/l) ● mV	Citation form of the mass concentration or voltage of the electrode.
<i>Measuring range Measuring mode: K (mg/l)</i>	<ul> <li>AutoRange</li> <li>0.1 100.0 mg/l</li> <li>1 1000 mg/l</li> </ul>	Fixed range

Menu item	Selection/Values	Explanations
Measuring range Measuring mode: mV	• -2000 2000 mV	Fixed range
<i>Temperature mode</i> (only with <i>Measuring</i> <i>mode</i> : <i>K</i> ( <i>mg/l</i> ))	• °C • °F	Unit of the measured temperature value (Celsius, Fahrenheit).
<i>Temp. adjustment</i> (only with <i>Measuring</i> <i>mode: K (mg/l)</i> )	-1.5 °C +1.5 °C	<ul> <li>The temperature compensation function enables the temperature sensor to be balanced against a reference temperature measurement (displacement of the zero point by ±1.5 °C). Notes:</li> <li>Due to the thermal capacity of the sensor, it is necessary to place it in a container with at least 2 liters of water.</li> <li>Leave the sensor in this container for at least 15 minutes while stirring occasionally, then carry out the adjustment. If the temperature difference of the water and sensor is &gt; 10°C, leave the sensor in the container for at least one hour while stirring occasionally.</li> </ul>
Conc. offset	-10.0 mg/l +10. mg/l	Constant value that is added to the mea- sured value.
Save and quit		The system confirms the saving of the set- tings and the display switches to the next higher level.
Quit		The display switches to the next higher level without storing the new settings.

## 4 Matrix adjustment, check and calibration

#### 4.1 General information

Calibration free operation	The AmmoLyt <sup>®Plus</sup> 700 IQ sensor is immediately ready to measure after being equipped with electrodes. For precise measurements, it is only necessary to adjust the electrodes to the sample matrix ("matrix adjustment"). In the recommended application (see section 1.3 RECOMMENDED FIELDS OF APPLICATION), the measuring characteris- tics of the electrodes remain stable for their entire service life. Thus, calibration is not recommended.
	Possible changes of the sample matrix can be determined by occa- sional comparison measurements (e.g. photometer) and compensated for by a new matrix adjustment as necessary. The sensor does not have to be taken out of the sample for this. At the same time, a matrix adjustment provides information on the state of the electrodes.

**Drift potential:** Simultaneously with the matrix adjustment (or calibration), the drift voltage DV(mV) of the electrode is determined. It serves to evaluate the long-term behavior of the electrode. The drift voltage changes due to the following factors:

- Influences due to the sample composition (matrix)
- Changes of the electrode characteristic(s).
- **Zeroing** The temporal change of the drift voltage is recorded in the calibration history so the long-term behavior of a electrode can be evaluated. As a start value, the user has to set the drift voltage to zero (zeroing) at the beginning of this evaluation period in order to observe any changes in the calibration history.

The zeroing for an electrode is done within the *MATRIX ADJUSTMENT* or *CALIBRATION* procedure if the zeroing was selected for the electrode (checked off). It becomes effective if the procedure was successfully carried out.

Carry out the zeroing when commissioning the electrode so you can watch in the calibration history the entire working period of the electrode.

It is not possible to zero an electrode with the *CHECK* procedure, as this procedure stores no data in the sensor.

#### **Resetting the slope with** the zeroing with the *MATRIX ADJUSTMENT* procedure resets the slope to the default setting (+ or - 59.2 mV) at the same time. Zeroing with the *CALIBRATION* procedure replaces the existing slope with the newly determined value.

#### 4.2 Matrix adjustment

#### 4.2.1 General information on matrix adjustment

This procedure adjusts the value measured directly in the test sample to an independently determined reference value ("lab value"). To determine the reference values, a sample is taken from the measuring solution and the relevant concentrations are measured (e.g. photometrically).

First select for which of the installed electrodes the matrix adjustment should be carried out. Based on this selection and the electrode equipment, the sensor software determines the ion types for which a reference measurement must be carried out. The menu guided routine adapts itself correspondingly and informs you of all necessary actions.

#### 4.2.2 Carrying out the matrix adjustment

Main steps	Step 1:	Determination of all electrode voltages ("reference volt- ages"). The sensor is in the sample. The procedure is started from the measured value display with <b><c< b="">&gt;. After completion the system returns to the mea- sured value display.</c<></b>
	Step 2:	Sampling at the same place and time if possible and determination of all relevant reference values
	Step 3:	Entry and storage of the measured reference values. This step is started by pressing <b><c></c></b> again.

Online help A convenient, menu guided routine guides you through the MATRIX ADJUSTMENT procedure. In addition, you can call up an Online help with <C> for each step. An info box with detailed information on the relevant operating step appears on the display. It provides, for example, important instructions on how to keep the correct basic conditions. When <OK> is pressed, the display returns to the current operating step.



Operation is different from the steps mentioned above if the sensor is operated either on the IQ SENSOR NET system 182 or on the MIQ/MC controller.

Move the highlighting to the *Online help* menu item with the arrow keys  $< \blacktriangle \lor < >$  or the toggle switch  $< \blacktriangle \lor >$  and press < OK >.

When **<OK>** is pressed once again, the display returns to the current operating step.

Matrix adjustment with<br/>zeroingAfter installing a new or different electrode you have to zero the elec-<br/>trode to facilitate a long-term evaluation. Details on zeroing, see sec-<br/>tion 4.1.

## Ammonium has to be determined immediately after taking the sample as its concentration changes very quickly due to the micro organisms that are present. It is best to take the sample immediately using a syringe filter for transport to the laboratory or to stabilize it otherwise. When adding stabilizing solutions, the dilution factor has to be taken into account.

- When determining the reference concentrations in the lab (step 2), you can use the sensor for control purposes at the same time. The sensor continues to use the data of the previous matrix adjustment (or calibration). The reference voltages determined in step 1 will not be lost. They remain stored until step 3 of the matrix adjustment is completed. They do not have to be noted and entered again.
- Use the *Online help* if you are unsure of anything during the matrix adjustment.

#### 4.2.3 Result of the matrix adjustment

**Evaluation** After the matrix adjustment, the system automatically evaluates the current condition of the electrode(s) based on the drift voltage. For a successful matrix adjustment, the drift voltage must be within the range -45 mV to +45 mV. The drift voltage is set to 0 mV if you have selected a zeroing.

whether the values should be stored for measurement.

At the end of the matrix adjustment procedure the drift voltage of all selected electrodes is shown on the display. The evaluation is indicated with a check mark ( $\checkmark$  = successful) or a minus sign ("-" = not successful).

For each successfully adjusted electrode you can individually decide

Taking over the determined values



If the matrix adjustment was erroneous due to an incorrect determination or entry of the reference concentration, you can correct the entry (if necessary several times). If, by doing so, it is not possible to eliminate the error, the complete matrix adjustment for this electrode has to be repeated or discarded. If it is discarded, measurement is continued with the values of the last valid matrix adjustment (or calibration). Values of successfully adjusted electrodes that were already stored are retained.



Actions for error elimination are given in the Online help and in chapter 8 WHAT TO DO IF ....

**Sensor history** The data of the matrix adjustment are available in the *Sensor history* (see section 4.4 SENSOR HISTORY).

#### 4.2.4 Special functions

The simple matrix adjustment, as described in the sections 4.2.2 to 4.2.3, will in most cases lead to precise measurement results. In some cases, special effects in the matrix can cause the real characteristic curve of the ISE measurement to deviate from the factory characteristic curve. This can lead to measured values that are not precise enough.

After consultation with the service department, it is possible to provide special functions to adjust the sensor for use in a special sample matrix or special measurement conditions.

These special functions can be selected like the other procedures.

#### 4.3 Check and calibration in standard solutions

#### 4.3.1 General information on checking and calibrating

In addition to the comparison measurement or matrix adjustment under real measurement conditions, it is possible to check the function of the entire sensor in standard solutions. If necessary, you can also take over in the sensor the slope and potential level of the individual electrodes via an exact calibration in standard solutions. The slope will be retained with a future matrix adjustment if it is carried out without zeroing the electrode.



The long term stable VARiON<sup>®Plus</sup> electrodes are calibration-free in the recommended application. A check in standard solutions is only of significance if all basic conditions (cleanness, conditioning etc.) are strictly kept.

Calibrating the sensor is neither necessary nor recommended.

Calibration can cause major measurement errors if the basic conditions are not sufficiently kept. After calibrating, a matrix adjustment in the sample is required in addition. Standard solutions do not correspond to any real test sample!

## When does a check or calibration make sense?

A check or calibration can be useful in the following special cases:

- If the measured values do not appear to be correct even after a careful matrix adjustment and if you suspect the electrode slopes to have changed
- If a new application is to be started whose sample composition considerably deviates from that of the recommended application (see section 1.3 RECOMMENDED FIELDS OF APPLICATION)
- Routinely within the framework of the company quality assurance

#### Differences between CHECK and CALIBRATION

The check and calibration are carried out in two separate routines. The schema is the same with both routines: Two standard solutions with different concentrations are measured one after the other. The procedures *CHECK* and *CALIBRATION* differ as follows:

#### • CHECK:

The basic conditions to be kept are less strict. It is suitable as a quick method to check whether the slope and potential level of the electrodes are within the allowed limits. The results are just for information. No characteristics or sensor settings are changed.

• CALIBRATION:

For this procedure, the basic conditions must comply with very high requirements (longer conditioning times, discarding of the conditioning solution, temperature adjustment etc.). Correspondingly, it requires more time. The slope and drift voltage are exactly determined and evaluated. If the calibration was successful, the determined values can be taken over for measurement. The procedure can, however, be used as a mere check method. Calibration is documented in the calibration history and in the log book.



Calibration is neither necessary nor recommended for the sensor.

Standard solutions

For the procedures *CHECK* or *CALIBRATION*, the following standard solutions in the following order:

- VARiON<sup>®</sup>/ES-2 (high concentration)
- VARiON<sup>®</sup>/ES-1 (low concentration).

These standard solutions contain all ion types that come into question (ammonium and potassium) and are especially adapted to the  $AmmoLyt^{@Plus}$  700 IQ.

**Online help** A comfortable, menu guided routine guides you through the procedure. In addition, you can call up an *Online help* with **<C>** for each step. An info box with detailed information on the relevant operating step appears on the display. It provides, for example, important instructions on how to keep the correct basic conditions. When **<OK>** is pressed, the display returns to the current operating step.



Operation is different from the steps mentioned above if the sensor is operated either on the IQ SENSOR NET system 182 or on the MIQ/MC controller.

Move the highlighting to the *Online help* menu item with the arrow keys  $< \blacktriangle \lor < \diamond \lor >$  or the toggle switch  $< \blacktriangle \lor >$  and press < OK >.

When **<OK>** is pressed once again, the display returns to the current operating step.

**Calibration with zeroing** After installing a new or different electrode you have to zero the electrode to facilitate a long-term evaluation. Details on zeroing, see section 4.1.

- Select a place where clean working conditions and a constant, sufficiently high temperature are granted (a room, e.g. laboratory). Temperatures under 10 °C extend the conditioning time considerably.
- Make sure the temperature of all components (sensor, standard solutions, containers, accessories etc.) is similar and constant. We recommend to store the standard solutions in the same place where the check or calibration is carried out.
- Use containers and accessories (beaker, stirring rod) that are absolutely clean and without detergent residues. Detergent residues can seriously affect the function of the electrodes.
- Remove the protective hood and clean the sensor thoroughly. Before the check, rinse the sensor with standard solution VARiON<sup>®</sup>/ ES-2.
- Make sure the depth of immersion is sufficient (minimum 5 cm).

Preparations and instructions on how to keep the basic conditions

- Make sure there are no air bubbles in front of the electrode membrane.
- Conditioning times: During the conditioning steps, all relevant electrode voltages are indicated on the display. Thus you can observe the conditioning process.
- Regular stirring accelerates the conditioning process considerably. Stirring with a stirring rod or the sensor itself is sufficient.
- For calibration, the standard solution is discarded after conditioning. This is pointed out by a corresponding note in the calibration routine. It is essential for an exact calibration result.
- Use the Online help if you are unsure of anything during calibration.

#### 4.3.2 Result of the check

**Evaluation** At the end of the check, the result for the electrodes is shown on the display with "+" (successful) or "-" (unsuccessful). The exact check criteria are given in the *Online help* of the result display. At the same time the result is entered in the log book as an info message. There is <u>no</u> entry in the calibration history.

**Sensor history** The result of the check is available in the *Sensor history* (see section 4.4 SENSOR HISTORY).

#### 4.3.3 Result of the calibration

**Evaluation** With calibration, the system automatically evaluates the condition of an electrode based on the data of its characteristic curve. The drift potential and slope are evaluated separately. For a calibration procedure to be valid, the potential level, slope and drift voltage must be within certain ranges.

Valid ranges for slope and drift potential:

Value of the slope: 50 ... 70 mV

Drift voltage: -45 ... +45 mV

The valid potential levels (MIN, MAX) can be taken from the online help.

Taking over the<br/>determined valuesFor each successfully calibrated electrode you can individually decide<br/>whether the values should be stored for measurement.



Actions for error elimination are given in chapter 8 What to DO IF ....

Sensor history

The result of the calibration is available in the *Sensor history* (see section 4.4 SENSOR HISTORY).

#### 4.4 Sensor history

The data of the calibration procedures and matrix adjustments are available in the Sensor history and in the calibration history.

The sensor history supplements and expands the calibration history:

- The results of any checks are displayed.
- All data of all electrodes of the sensor can be displayed in one list.
- More datasets can be displayed for each electrode.

#### Sensor history



The Sensor history and calibration history are not available if the sensor is operated either on the IQ SENSOR NET System 182 or on the MIQ/MC controller.

- 1 In the measured value display, select the sensor with <▲▼> and use <**C**> to open the *PROCEDURE/SETTINGS* window for the sensor.
- 2 Select the menu Sensor history.
- 3 Select the electrodes that should be displayed in the *Sensor history*.
- 4 Follow the user guide. The *Sensor history* is displayed for the selected electrodes.



Using **<S>**, you can save the displayed Sensor history to a USB memory device connected (directory, VARiON).

**Calibration history** 



The calibration history is not available if the sensor is operated on the IQ SENSOR NET System 182.

- 1 In the measured value display, select the sensor with <▲▼> and confirm with <**OK**>. The *Anzeige/Optionen* menu pops up.
- 2 Display the individual calibration histories.

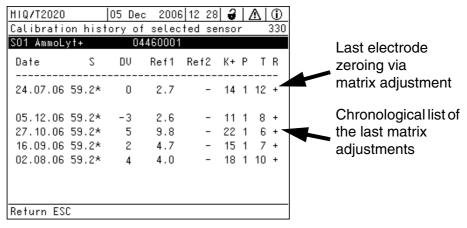


Fig. 4-1 Calibration history with matrix adjustments (example: AmmoLyt+)

The calibration history provides the following information:

Date	Date of the calibration or matrix adjustment
S	Slope [mV] of the electrode. <u>Note:</u> After a matrix adjustment, the values for the slope are marked by a star (*) because they were not changed by this procedure.
DV	Drift voltage [mV] After zeroing and subsequent calibration or matrix adjustment, 0 is displayed.
Ref1/Ref2	Depending on the procedure. Matrix adjustment: Reference concentration [mg/l] Calibration: Standard solution used ( <i>ES1</i> , <i>ES2</i> )
К+	Depending on the procedure. Matrix adjustment: Interfering ions concentration [mg/l] Calibration: Standard solution, VARiON <sup>®</sup> /ES-2
Ρ	Procedure ( $1 = matrix adjustment$ , $3 = calibration$ )
Τ	Temperature [°C]
R	<ul> <li>Evaluation of the calibration or matrix adjustment</li> <li>+ : Calibration or matrix adjustment. The sensor measures with the new calibration or adjustment data.</li> <li>? : Calibration or matrix adjustment not accepted and not saved. Measurement is continued with the last valid values.</li> </ul>



If the compensation electrode is displayed as an extra sensor, the calibration history of the compensation electrode can be viewed in the sensor menu of this sensor.

Log book messages are displayed with the main sensor. The IQ SENSOR NET does not keep an extra log book for this sensor.

If the compensation electrode is not displayed as an extra sensor, you can, if required, generate a log book message with the calibration history via the menu item *(Calib. history K)* in the setting table of the relevant main sensor. The log book message is in the log book of the relevant main sensor (AmmoLyt+ -> message code IC5395).

## 5 Measuring

#### 5.1 Measurement operation

Note the data given in section 9.2 APPLICATION CONDITIONS, especially the minimum immersion depth of the sensor (> 50 mm with mounted protective hood).

#### NOTE

Greases, oils, certain tensides and similar substances can shorten the operational lifetime of the electrodes. Therefore, they should not be present in the test sample(see section 3.3.1 EFFECTS TO BE GENERALLY AVOIDED).



If necessary, the CH Cleaning head can be used to keep the sensor clean (see chapter 7 REPLACEMENT PARTS AND ACCESSORIES).

#### 5.2 Factors affecting the measured value

Ammonium measurement with the AmmoLyt<sup>®Plus</sup> 700 IQ can be affected by the following variables:

- pH value
- Potassium ions



The effects of influencing variables on measurement and compensating actions are described in detail in the primer ION SELECTIVE MEASUREMENT IN ONLINE ANALYSIS.



## 6 Maintenance and electrode exchange

6.1 General maintenance instructions

#### WARNING

Contact with the sample can be dangerous for the user! Depending on the type of sample, suitable protective measures must be taken (protective clothing, protective goggles, etc.).

Maintenance condition We recommend to switch on the maintenance condition each time the sensor is taken out of the measuring position. This avoids unwanted reactions of linked outputs. More detailed information on the maintenance condition is given in the respective IQ SENSOR NET system operating manual.

**VARION<sup>®</sup>/Epack** The VARION<sup>®</sup>/Epack set with usual replacement parts is available for maintenance (see chapter 7 REPLACEMENT PARTS AND ACCESSORIES).

#### 6.2 Exterior cleaning



To keep the electrodes clean, we recommend to use the CH cleaning head (see chapter 7 REPLACEMENT PARTS AND ACCESSORIES).

With normal operation (e.g. municipal wastewater) we strongly recommend to clean the outside of the sensor:

- when it is strongly contaminated (after visual check)
- if erroneous measured values are suspected
- each time before removing or exchanging an electrode

#### NOTE

Do not use any detergent or deionized water for cleaning. Heed the notes in section 3.3.1 EFFECTS TO BE GENERALLY AVOIDED.



We recommend to clean the sensor shaft and electrodes while the sensor is still connected to the sensor connection cable. Otherwise, moisture and/or dirt can get into the plug connection where it can cause contact problems.

If you need to disconnect the sensor from the sensor connection cable, please note the following points:

• Before disconnecting the sensor from the SACIQ sensor connection cable, remove any larger pieces of contamination from the sensor, particularly in the area of the plug connection (brush it off in a bucket of tap water, wash it off with a hose or wipe it off with a cloth).

- Unscrew the sensor from the SACIQ sensor connection cable.
- Always place a protective cap on the plug head of the sensor and on the SACIQ sensor connection cable so that no moisture or dirt can get into the contacting surfaces.
- In corrosive environments, close the socket of the sensor connection cable with the screwable SACIQ-Plug when it is dry in order to protect the electrical contacts from corrosion. The protective plug is available as an accessory (see section 7.2 GENERAL ACCESSORIES).
- **Cleaning the sensor** Clean the sensor shaft with tap water and a soft sponge or brush. Remove the protective hood. The electrodes are best cleaned under running tap water using a soft toothbrush or brush.

Cleaning the coupling ring of the protective hood The coupling ring can be unscrewed and dismantled for cleaning as follows:

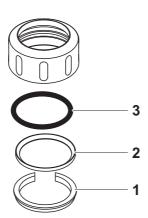


Fig. 6-1 Dismantling the coupling ring

1	Remove the retaining ring (pos. 1 in Fig. 6-1).
	Remove the intermediate ring (pos. 2) and sealing ring (pos. 3).

After the parts have been cleaned, reassemble the coupling ring in reverse order. When doing so make sure that the tapered side of the intermediate ring (pos. 2) points towards the sealing ring (pos. 3).

## 6.3 Exchanging the electrodes

### NOTE

The sensor can be damaged by dirt and moisture. Each time before dismantling an electrode carefully clean the area around the electrodes (section 6.2). Before mounting an electrode make sure the area behind the sealing ring of the electrode and the receptacle are dry and clean. The AmmoLyt<sup>®Plus</sup> 700 IQ may only be submersed when the electrodes or original blind plugs are mounted.

Use the special socket wrench provided to dismantle an electrode. Electrodes are installed as described in section 3.4.1 EQUIPPING THE SENSOR WITH ELECTRODES.

Recognizing the electrode type from outside

When mounted, the electrodes can be recognized by the following features:

Electrode	Hexagon	Front sur- face	Other features
VARION <sup>®Plus</sup> Ref	black	black	<ul> <li>Thread at the hexagon</li> </ul>
VARION <sup>®Plus</sup> NH4	black	black	<ul> <li>Hexagon with- out thread</li> </ul>
VARION <sup>®Plus</sup> K	black	white	



For the correct storage of the electrodes please follow the instructions in section 3.3 NOTES ON THE HANDLING OF THE ELECTRODES.

## 7 Replacement parts and accessories

## 7.1 Electrodes

Exchange electrodes	Description	Model	Order no.
	Reference electrode	VARiON <sup>®Plus</sup> Ref	107042
	Ammonium electrode	VARiON <sup>®Plus</sup> NH4	107044
	Potassium electrode	VARION <sup>®Plus</sup> K	107046

Storing equipment	Description	Model	Order no.
	250 ml potassium chloride solution for storing the reference electrode	KCI-250	109705

## 7.2 General accessories

Standard solutions	Description	Model	Order no.
for calibration	1 liter combination standard 1 (low concentration)	VARION <sup>®</sup> /ES-1	107050
	1 liter combination standard 2 (high concentration)	VARiON <sup>®</sup> /ES-2	107052
Maintenance equipment	Description	Model	Order no.
	Polishing strip	SF 300	203680
Protective plugs	Description	Model	Order no.
	Screwable plug for sensor connection cable	SACIQ-Plug	480065
General replacement	Description	Model	Order no.
parts	Protective hood	VARION <sup>®</sup> 700 IQ-SK	107056

Description	Model	Order no.
Replacement parts set, compris- ing - 1 blind plug for receptacle - 1 special socket wrench	VARiON <sup>®</sup> /Epack	107057
<ul> <li>3 replacement sealing rings for electrodes/blind plugs</li> </ul>		
<ul> <li>Storing equipment for electrodes:</li> <li>1 nut (transparent),</li> <li>1 watering cap with sponge</li> <li>1 nut (black)</li> <li>1 watering cap (without sponge) for reference electrode</li> </ul>		

# Components for cleaning system

Description	Model	Order no.
Cleaning head	СН	900107
Passive valve module	DIQ/CHV	472007
Active valve module (does not require a free relay output in the IQ SENSOR NET system)	MIQ/CHV PLUS	480018
Air compressor supplying the sensor cleaning system with cleaning air	Cleaning Air Box 115 VAC 230 VAC	480017 480019



Information on further IQ SENSOR NET accessories is given in the catalog and on the Internet.

## 8 What to do if ...

## 8.1 Interpretation of the drift voltage

The drift voltage is influenced by the potential levels of the measurement electrode and reference electrode. If the potential levels shift, e.g. caused by aging, both parts can move into the same direction or into opposite directions. The comparison of the drift voltages of two or three electrodes enables to draw conclusions concerning the state of individual electrodes if a matrix adjustment or calibration resulted in an invalid or considerably deviating drift voltage.

# **Assessment aids** View the calibration history of the electrodes. In the following cases, assessment is relatively easy:

- If the drift voltages of all electrodes show the same trend, i. e. the drift voltages have shifted in the same direction (positive or negative) by approximately the same amount, this indicates that the potential level of the reference electrode has shifted. The reference electrode is possibly highly contaminated or at the end of its service life.
- If the drift voltages of all electrodes do not show a trend but shift by different amounts into different directions, the potential level of the reference electrode has not changed considerably. The invalid drift voltage is probably caused by a defective measuring electrode. The measuring electrode is possibly highly contaminated or at the end of its service life.

8.2	Error	causes	and	remedies

No measured value	Cause	Remedy
display	<ul> <li>Sensor not connected</li> </ul>	<ul> <li>Connect the sensor</li> </ul>
	<ul> <li>Incorrect electrode equip- ment</li> </ul>	<ul> <li>Correct electrode equipment</li> </ul>
	<ul> <li>Electrode(s) not at all or incorrectly recognized by the system</li> </ul>	<ul> <li>Check the installation and con- tacts of the electrode (gap-free mounting)</li> </ul>
		<ul> <li>Check electrode receptacle for moisture</li> </ul>
		<ul> <li>If necessary, unscrew the elec- trode/blind plug and thoroughly dry the electrode/blind plug and receptacle</li> </ul>
	– Unknown	<ul> <li>Look for error messages in the log book</li> </ul>
	<ul> <li>Liquid in the sensor shaft</li> </ul>	- Contact the service department

Measurement provides
implausible measured
values

Cause	Remedy
<ul> <li>No matrix adjustment carried out</li> </ul>	<ul> <li>Carry out matrix adjustment</li> </ul>
<ul> <li>Error during matrix adjust- ment (e.g. incorrect labora- tory values)</li> </ul>	<ul> <li>Check the conditions of the matrix adjustment</li> <li>Carry out new matrix adjustment</li> </ul>
<ul> <li>Calibration error (e.g. contaminated standard solutions)</li> </ul>	<ul> <li>Check the calibration conditions</li> <li>Recalibrate</li> <li>Reset to default calibration</li> </ul>
<ul> <li>Manual interfering ions com- pensation works with an unsuitable value</li> </ul>	<ul> <li>Determine and enter the inter- fering ions compensation once again</li> </ul>

Cause	Remedy
<ul> <li>Electrode(s) not at all or incorrectly recognized by the system</li> </ul>	<ul> <li>Check the installation and con- tacts of the electrode (gap-free mounting)</li> </ul>
	<ul> <li>Check electrode receptacle for moisture</li> </ul>
	<ul> <li>If necessary, unscrew the elec- trode/blind plug and thoroughly dry the electrode/blind plug and receptacle</li> </ul>
<ul> <li>Electrode contaminated</li> </ul>	<ul> <li>Clean the electrode (see section 6.2)</li> </ul>
<ul> <li>Liquid in the sensor shaft</li> </ul>	- Contact the service department

Measurement provides jumping, unstable or	Cause	Remedy
drifting values	<ul> <li>Measurement / compensa- tion electrode:</li> <li>Electrode membrane not moistened by measuring solution, e.g. due to air in front of the membrane (mem- brane dried up)</li> </ul>	<ul> <li>Moisten membrane with deion- ized water using a wash bottle. To do so, position the opening of the wash bottle on the mem- brane and splash against the membrane vigorously</li> </ul>
	<ul> <li>Measurement / compensa- tion electrode: Air bubble behind the mem- brane</li> </ul>	<ul> <li>Hold the electrode in a vertical position with the membrane down and knock it on the side with the special socket wrench until the air bubble moves up</li> </ul>
	<ul> <li>Measurement electrode / compensation and reference electrode: Insufficient electrical contact in the electrode recenteele</li> </ul>	<ul> <li>Check the installation and con- tacts of the electrode (gap-free mounting)</li> <li>Check electrode receptacle for</li> </ul>
	in the electrode receptacle	<ul> <li>moisture</li> <li>If necessary, unscrew the electrode/blind plug and thoroughly dry the electrode/blind plug and receptacle</li> </ul>
	- Reference electrode dried up	- Replace reference electrode
	<ul> <li>Measurement / compensa- tion electrode or reference electrode leaky or damaged</li> </ul>	<ul> <li>Replace defective electrode</li> </ul>
	<ul> <li>Liquid in the sensor shaft</li> </ul>	<ul> <li>Contact the service department</li> </ul>

Faulty result of the matrix adjustment	Cause	Remedy
	<ul> <li>Error during procedure, e.g. incorrect lab values</li> </ul>	<ul> <li>Check the basic conditions</li> <li>Follow the practical notes on page 26 or in the <i>online help</i></li> <li>Recalibrate</li> </ul>
	<ul> <li>Reference electrode or mea- surement electrode defective due to aging (see section 8.1)</li> </ul>	<ul> <li>Replace defective electrode</li> </ul>

	Cause	Remedy
	<ul> <li>Error during procedure, e.g. contaminated standard solu- tions</li> </ul>	<ul> <li>Check the basic conditions</li> <li>Follow the practical notes on page 29 or in the <i>online help</i></li> <li>Recalibrate</li> </ul>
	<ul> <li>Reference electrode or mea- surement electrode defective due to aging (see section 8.1)</li> </ul>	<ul> <li>Replace defective electrode</li> </ul>

#### **Technical data** 9

#### 9.1 **Measuring characteristics**

**Measuring principle** Potentiometric measurement by means of ion sensitive electrodes. Modular structure with jointly used reference electrode and ion sensitive electrodes. Integrated microprocessor electronics, screened 2-wire connection for power and data transmission.

Measured parameters	Main measured parameter	Ammonium
	Secondary measured parameter	Temperature
	Compensation parameter	Potassium (depending on the electrode equipment)

Measuring ranges and resolution, Ammonium measurement

Measuring mode	Measuring range	Resolution
NH4-N	0.1 100.0 mg/l 1 2000 mg/l	0.1 mg/L 1 mg/L
NH4	0.1 129.0 mg/l 1 2580 mg/l	0.1 mg/L 1 mg/L
mV	-2000 +2000 mV	1 mV
Measuring	Measuring range	Resolution

Measuring ranges and resolution, Potassium measurement

mV	-2000 +2000 mV	1 mV
Measuring mode	Measuring range	Resolution
К	0.1 100.0 mg/l 1 1000 mg/l	0.1 mg/L 1 mg/L
mV	-2000 +2000 mV	1 mV

Interfering ions compensation	•	Interfering ions that can be compensated for
	Ammonium	Potassium (K <sup>+</sup> )

Selectable procedures	Compensation procedures	Description
for interfering ions compensation	Automatic	up to 1000 mg/l interfering ions when equipped with the corre- sponding compensation elec- trode
	Manual	without compensation electrode by manual entry of the interfering ions concentration (range 0.1 1000 mg/l).
		Note: With the Link (sensor to sensor) function, the IQ SENSOR NET is able to provide a measured value for the interfering ion.
Temperature	Sensing element type	integrated NTC
measurement	Measuring range	- 5 °C + 60 °C (23 140 °F)
	Accuracy	± 0.5 K
	Resolution	0.1 K
	Response time t <sub>95</sub>	< 20 s
Temperature	Automatic in the range $0^{\circ}$ C 4	°C (32 104 °E)


## Temperature compensation

Automatic in the range 0 °C ... 40 °C (32 ... 104 °F)

## 9.2 Application conditions

Allowed	Measuring medium	0 °C 40 °C (32 104 °F)
temperature range	Storage/transport	0 °C 40 °C (32 104 °F)
Allowed pH range of the measuring medium	4 12	
Pressure resistance	Sensor with the electrodes or blind plugs screwed in and the SACIQ sensor connection cable connected:	
	Max. admissible overpressure	2 x 10 <sup>4</sup> Pa (0.2 bar)
Type of protection	Sensor with the electrodes or blind plugs screwed in and the SACIQ sensor connection cable connected: IP 68, 0.2 bar (2 x 10 <sup>4</sup> Pa)	
Immersion depth	min. 50 mm; max. 2 m depth	
Operating position	Electrode support pointing downward (maximum angle to the plumb line = 60 $^{\circ}$ )	
Field of application	<ul> <li>Control / monitoring in the aeration tank of a waste water treatment plant</li> </ul>	
	<ul> <li>Water and waste water monitoring</li> </ul>	

## 9.3 General data

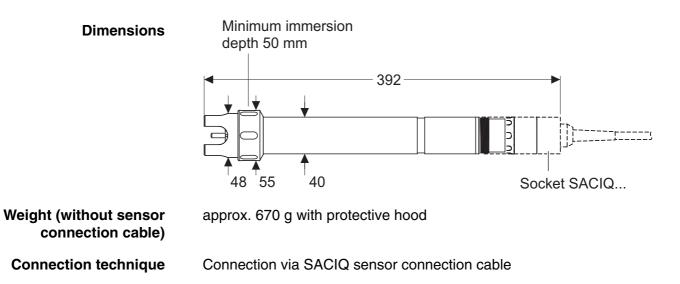

Material	Shaft	V4A stainless steel 1.4571
	Protective hood	РОМ
	Electrode support	РОМ
	Temperature sensor	V4A stainless steel 1.4571
	Plug head connector housing	РОМ
	Plug, 3-pole	ETFE (blue) Tefzel <sup>®</sup>
	Electrodes	see section 9.5
	NOTE	1

### NOTE

Stainless steel can be sensitive to corrosion with chloride concentrations from  $\geq$  500 mg/l.

Meter safety	Applicable norms	– EN 61010-1
		– UL 3111-1
		- CAN/CSA C22.2 No. 1010.1
		I

## 9.4 Electrical data

Nominal voltage	Max. 24VDC via the IQ SENSOR NET (for more details, see chapter TECHNICAL DATA of the IQ SENSOR NET system oper- ating manual)
Power consumption	0.2 W
Protective class	

## 9.5 Data of the VARiON<sup>®Plus</sup> electrodes

### 9.5.1 Response times

	VARION <sup>®Plus</sup> NH4	VARION <sup>®Plus</sup> K
Response time t <sub>90</sub>	< 3 min	< 3 min
Measured at 20 °C (68 °F) and a concentration change of	10 to 100 mg/l NH4-N	5 to 50 mg/l K

## 9.5.2 Materials

	VARION <sup>®Plus</sup> NH4	VARION <sup>®Plus</sup> K	VARION <sup>®</sup> Ref
Electrodes			
Enclosure	РОМ	POM	PVC
Clamping ring	РОМ	POM	-
Membrane	soft PVC with stainless steel protective grating	soft PVC with stainless steel protective grating	-
Junction	-	-	Porous PVDF
Sealing ring	FPM (Viton <sup>®</sup> )	FPM (Viton <sup>®</sup> )	FPM (Viton <sup>®</sup> )
Connection con- tacts	gold-plated	gold-plated	gold-plated

## Storing equipment

Watering cap	POM	POM	POM
Nut	PMMA	PMMA	POM

## 9.5.3 Weights


VARION <sup>®Plus</sup> NH4	VARION <sup>®Plus</sup> K	VARiON <sup>®</sup> Ref
5 g	5 g	13 g

## 10 Indexes

## **10.1** Explanation of the messages

This chapter contains a list of all the message codes and related message texts that can occur in the log book of the IQ SENSOR NET system for the AmmoLyt<sup>®</sup>*Plus* 700 IQ sensor.

Information on



• the structure of the message code

is given in the LOG BOOK chapter of the IQ SENSOR NET system operating manual.



The last three digits of the message code identify the source of the message:

- 521 = *AmmoLyt+700IQ* (Armature / component class, adapters ADA)
- 395 = *AmmoLyt+* (Ammonium / potassium electrode)
- 397 = *AmmoLyt*+ (Potassium electrode)

## 10.1.1 Error messages

Message code	Message text
EA1395	<i>Meas. range exceeded or undercut * Check process * Select other meas. range</i>
EA2521	Sensor temperature too high! * Check process and application
EA3521	Sensor temperature too low! * Check process and application
EAN395	Potassium measurement: range exceeded or undercut * Check process
EIA521	Incorrect equipment * for correct electrode equipment see operating manual
ES1521	Component hardware defective * Contact service

### 10.1.2 Informative messages

Message text
<i>K electrode has been successfully calibrated</i> * For calibration data, see calibration history
(This message contains calibration data of the potassium electrode)
Sensor could not be calibrated, Measuring with old calibration values * Check calibration conditions and calibration standard * View calibration history * Service sensor immediately (see operating manual)
Electrode: check successful
K electrode: check successful
Electrode: check unsuccessful Please follow online help.
K electrode: check unsuccessful Please follow online help.
(This message is generated when the electrode equipment is changed. It informs you of the new assignment of the electrode receptacles)
see VARiON A
see VARiON N
AmmoLyt+:Data of the last matrix adjustmont or the last calibration

## 10.2 Status info

The status info is a coded piece of information on the current status of a sensor. Each sensor sends this status info to the controller. The status info of sensors consists of 32 bits, each of which can have the value 0 or 1.

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

10000000	00000000	(general)
000000000	000000000	(internal)
16 17 18 19 20 21 22 23	24 25 26 27 28 29 30 31	L

The bits 0 - 15 are reserved for general information. The bits 16 - 21 are reserved for internal service information.

You obtain the status info:

• via a manual query in the Settings/Service/List of all components

Status info, general structure

menu (see system operating manual)

- by an automated query
  - from a superordinate process control (e. g. when connected to the Profibus)
  - of the IQ Data Server (see operating manual of the IQ SENSOR NET software pack)



The evaluation of the status info, e.g. in the case of an automated query, has to be made individually for each bit.

Status	-Info
AmmoLyt <sup>®Plus</sup> 70	00 IQ

Status bit	Explanation	
Bit 0	Component hardware defective	
Bit 1-31	-	

Indexes

# Xylem |ˈzīləm|

The tissue in plants that brings water upward from the roots;
 a leading global water technology company.

We're a global team unified in a common purpose: creating advanced technology solutions to the world's water challenges. Developing new technologies that will improve the way water is used, conserved, and reused in the future is central to our work. Our products and services move, treat, analyze, monitor and return water to the environment, in public utility, industrial, residential and commercial building services settings. Xylem also provides a leading portfolio of smart metering, network technologies and advanced analytics solutions for water, electric and gas utilities. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise with a strong focus on developing comprehensive, sustainable solutions.

For more information on how Xylem can help you, go to www.xylem.com.



Service and Returns: Xylem Analytics Germany Sales GmbH & Co. KG WTW Am Achalaich 11 82362 Weilheim Germany

 Tel.:
 +49 881 183-325

 Fax:
 +49 881 183-414

 E-Mail
 wtw.rma@xylem.com

 Internet:
 www.xylemanalytics.com



Xylem Analytics Germany GmbH Am Achalaich 11 82362 Weilheim Germany CE UK CA