


Installation instructions


BE/ST 170

Article no. 109280

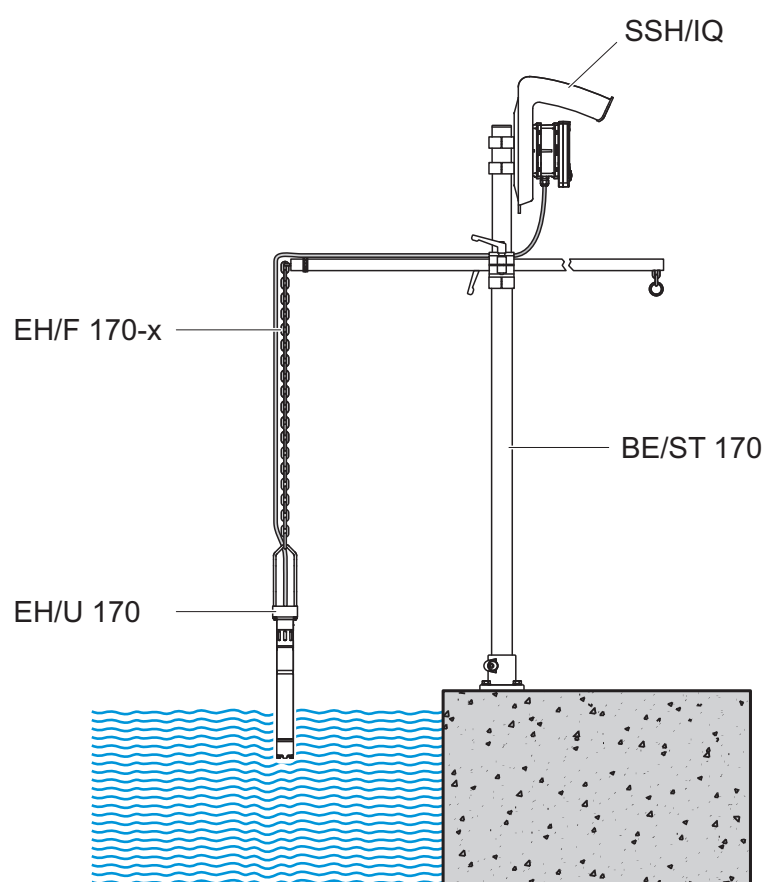


Vario floor mounting stand


Mounting

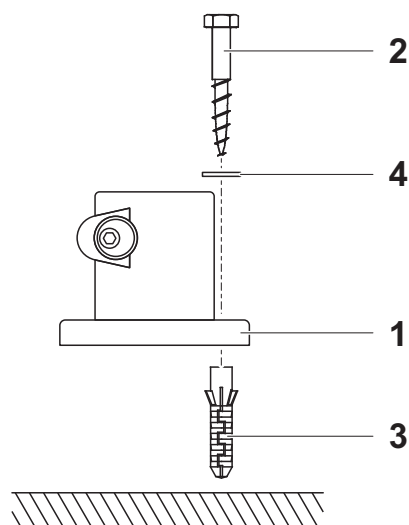

Mount the base (1) on the ground.

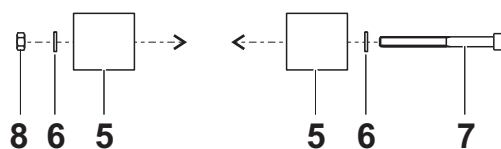



Loosely screw together the two clamp bodies (5) to form a holding clamp according to the drawing.

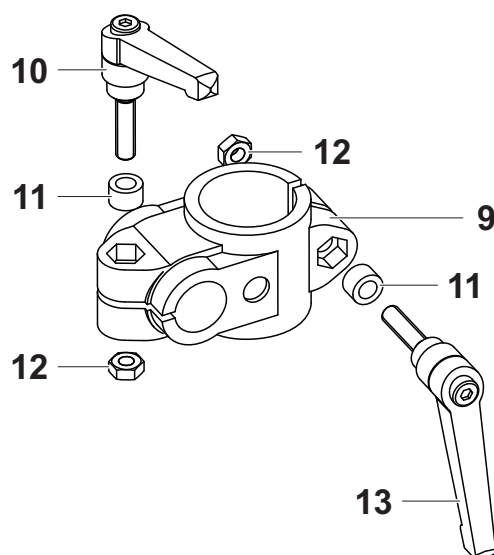

Preassemble the double junction clamp (9) according to the drawing (already done by the manufacturer).


Note: For the installation of additional EH/F 170-x swing mounting assemblies, additional double junction clamps (separately available as MS/KK 170, order-no. 109290) may be installed.

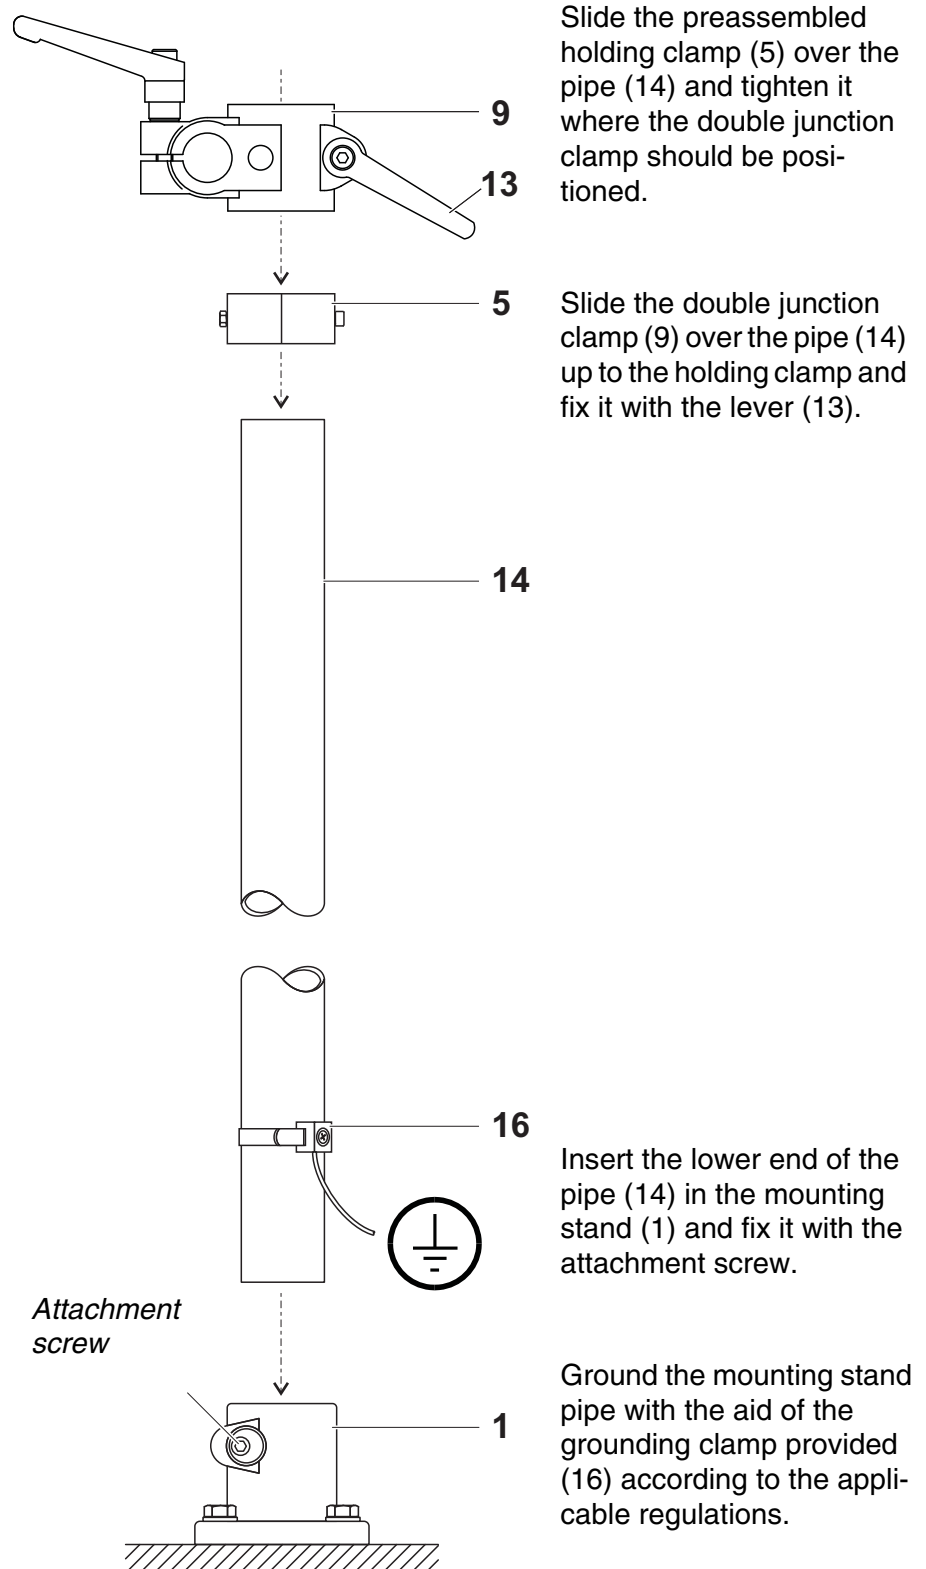

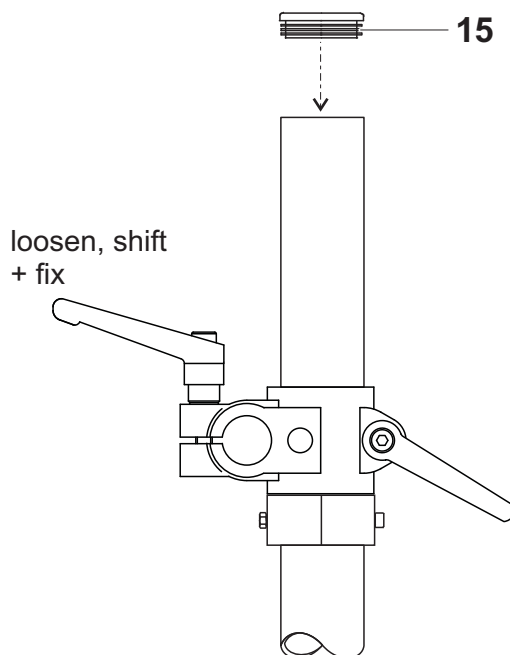

Close the upper end of the pipe with the lamellar plug (15).

To adjust the orientation of the lever, pull the lever, then turn and release.

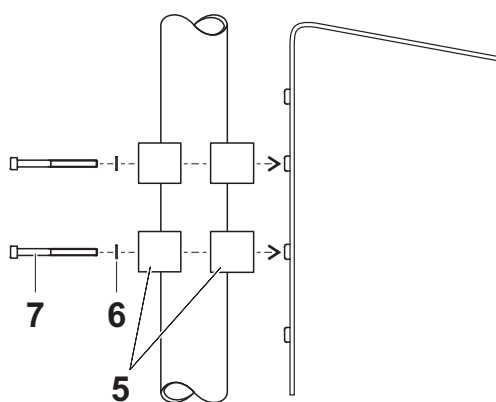

Mount the sun shield on the pipe using the two remaining clamps (5).

(The sun shield is not included in the scope of delivery.)

Technical data

Dimensions

Total height	1700 mm
Pipe diameter	50 mm

Materials

Pos.	Designation	Material
1	Base	Aluminium alloy AlSi12
2	Wood screw Ø 10 x 70	Stainless steel 1.4301 (V2A)
3	Dowel, size 12	Polypropylene
4	Washer 10.5	Stainless steel 1.4301 (V2A)
5	Clamp body	Polypropylene
6	Washer 5.3	Stainless steel 1.4301 (V2A)
7	Hexagon socket head cap screw M5 x 60	Stainless steel 1.4301 (V2A)
8	Nut M5	Stainless steel 1.4301 (V2A)
9	Double junction clamp body	Cast aluminum
10	Clamping lever M10 x 40	Plastic-coated zinc die cast, with stainless steel screw 1.4305 (V2A)
11	Bushing	Aluminum
12	Nut M10	Stainless steel 1.4301 (V2A)
13	Clamping lever M10 x 40	Plastic-coated zinc die cast, with stainless steel screw 1.4305 (V2A)
14	Pipe	Stainless steel 1.4301 (V2A)
15	Lamellar plug	Polyethylene (LD-PE)
16	Grounding clamp	Bronze, tin-plated and steel, zinc-plated

