




Optical SAC and UVT sensor UV 70x IQ SAC




Low-cost probe (integrated ultrasonic cleaning, turbidity compensation) for the maintenance-free and reagent-free SAC measurement according to DIN 38404 C3

We would like to inform you about the application range on our website

UV 701 IQ SAC, UV 705 IQ SAC

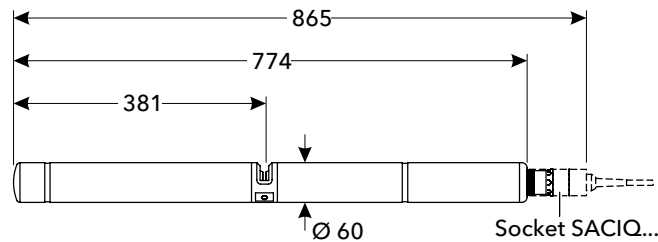

With shock protection:

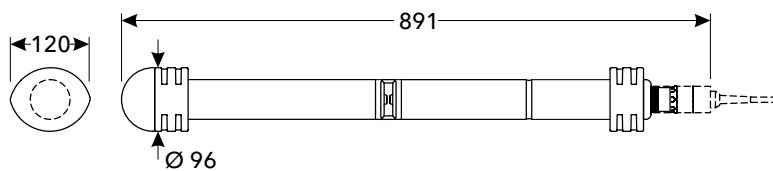

Model	UV 701 IQ SAC	UV 705 IQ SAC
Measuring method	UV-Absorptionsmessung 254 nm (Kompensation 550 nm)	
Measuring gap (optical layer thickness)	1 mm	5 mm
Application (optimized for)	Municipal wastewater with a low proportion of industrial wastewater, wastewater treatment plants, surface water	
Measuring range and Resolution	COD _{total} 0.0 ... 20,000 mg/l 1 mg/l COD _{dissolv} 0.0 ... 12,500 mg/l 1 mg/l TOC 0.0 ... 20,000 mg/l 1 mg/l DOC 0.0 ... 12,500 mg/l 1 mg/l BOD 0.0 ... 8,000 mg/l 1 mg/l SAC _{254 total} 0.0 ... 3,000 1/m 1 1/m SAC _{254 dissolv} 0.0 ... 3,000 1/m 1 1/m UVT _{254 total} * 0.0 ... 100.0 % 0.1 % UVT _{254 dissolv} * 0.0 ... 100.0 % 0.1 %	0.0 ... 800 mg/l 0.1 mg/l 0.0 ... 800 mg/l 0.1 mg/l 0.0 ... 500.0 mg/l 0.1 mg/l 0.0 ... 500.0 mg/l 0.1 mg/l 0.0 ... 500.0 mg/l 0.1 mg/l 0.0 ... 600.0 1/m 0.1 1/m 0.0 ... 600.0 1/m 0.1 1/m 0.0 ... 100.0 % 0.1 % 0.0 ... 100.0 % 0.1 %
Displayable Parameters	Up to 2 at the same time	
Accuracy (standard application muni. WWTP)	Carbon parameters: ± 5 % of measured value ± 2.5 mg/l SAC: ± 0.5 % of measured value ± 0.4 SAK UVT: < 10 % UVT ± 1 % UVT of measured value; > 10 % UVT ± 0.1 % UVT of measured value	
Flow rate	≤ 3 m/s	
Pressure Resistance	Maximum 1 bar (incl. sensor connection cable)	
Electrical connections	2-wire shield cable with quick fastener to sensor	
Electromagnetic Compatibility	EN 61326, Class B, FCC Class A Intended for indispensable operation	
Certifications	CE, UKCA	
Mechanical	Housing: Titan Grade 2, PEEK Window: Sapphire glass Protection class: IP 68	
Weight (without cable)	Approx. 8.82 lb (4 kg)	
Warranty	2 years for defects in quality	

* The UVT-254 value is standardized to 10 mm gap width.

Model	Description	Order No.
UV 701 IQ SAC	Optical SAC and UVT sensor (254 nm) to measure higher concentrations with integrated ultrasonic cleaning, multifunctional slide and shock-absorption-rings, without connecting cable (order SACIQ separately)	481036
UV 705 IQ SAC	Like UV 701 IQ SAC, but to measure lower concentrations	481038



Xylem Analytics Germany Sales GmbH & Co. KG · Am Achalaich 11 · 82362 Weilheim · Germany
 Phone: +49 881 1830 · Fax: +49 881 183-420 · Info.XAGS@xylem.com · www.xylemanalytics.com
 All names are registered trademarks or trademarks of Xylem Inc. or one of its subsidiaries. Technical changes reserved. © 2023 Xylem Analytics Germany Sales GmbH & Co. KG.

